



CHANGING ROD ASSEMBLY

1. Drill out 4 rivets. NOTE: Be careful not to crack housing. If housing is damaged, replace with new housing and cover.
2. Remove clips.
3. Pry open housing and cover.

4. Pull and turn cable vertically (90° from spool) at gear connection until hook unlatches from spool.
5. Remove seal(s) from cable.
6. Unscrew finial from mast.
7. Pull rod assembly out of tube.
8. Latch cable hook of new rod assembly onto spool, making sure it is firmly caught.
9. Place seal onto the finial end of the mast assembly.
10. Push rod assembly into the tube, until the mast assembly is fully extended.
11. Tightly screw the finial back on, making sure not to damage any section of the mast.
12. While leaving mast extended, place cable in spool groove and place seal(s) at the end of the tube, then reseal cover.
13. Secure cover tightly by installing bolts and nuts in the drilled out rivet holes.
14. Replace clips on housing and cover.

