




DOOR PANEL REMOVAL

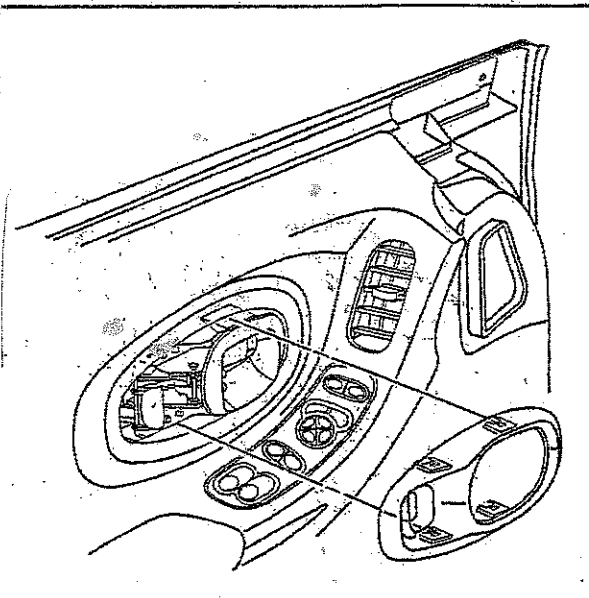

1. Lower the door window
2. Remove the inside door handle bezel by pulling the handle open to expose the openings to the bezel locking tabs. Insert a screw driver in the lower opening. Tip the screwdriver up while pulling on the bezel to release the lower locking tab. Insert the screwdriver in the upper opening and tip the screwdriver down while pulling on the bezel, releasing the upper and forward locking tabs. Grasp the bezel and firmly pull the bezel releasing the rear locking tabs.

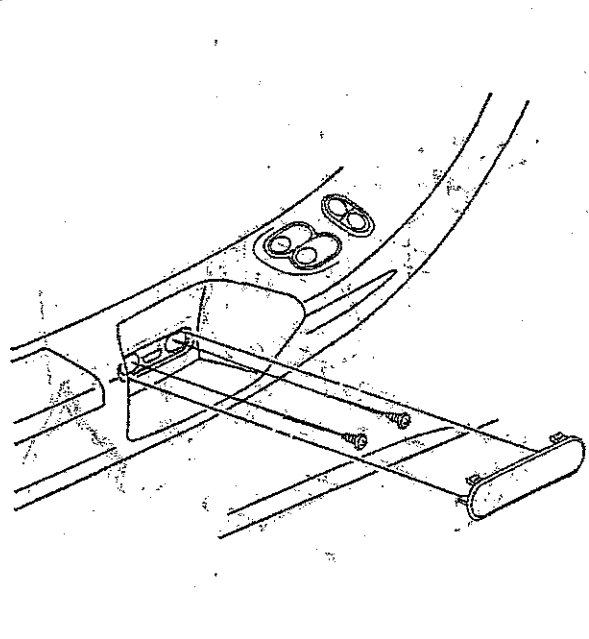

3. Gently pry out the door pull handle opening plug with a screwdriver.
4. Remove the two screws behind the pull handle plug.

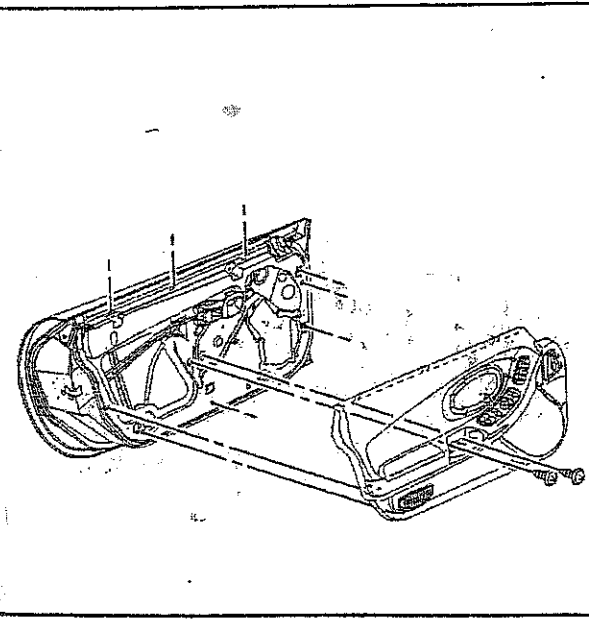

5. Carefully insert a screwdriver between the lower edge of the door panel and door frame and carefully pry the panel away from the door frame. Continue pulling the panel away from the door across the bottom of the door.
6. Lift the door panel up and off the upper retainers and remove the wiring connectors from the switches. Replace any broken panel retainers.