

Gas Filler Paint Protector

Installation Procedures:



Step 1: Remove the 2 lower screws (or torx) on each side as shown in picture.




Step 4: Position protector as shown, lining up the prepunched holes under the assembly to where the 2 lower screws (or torx) were removed.



Step 2: Loosen the 2 top screws (or torx) on each side at the top. (Do not have to remove.)



Step 3: Lift assembly and locate position for mounting.

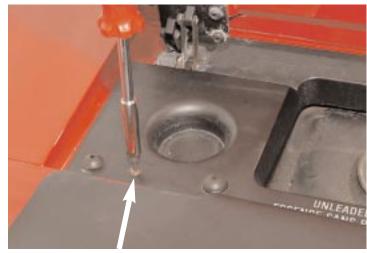

Step 5: Re-install 2 lower screws (or torx) and tighten the 2 top screws.

Step 6: Finished!! This is folded and tucked under the gas door when not in use.