

" THIS ARTICLE IS INTENDED FOR YOUR REFERENCE ONLY.

ACTUAL PARTS, YEARS AND BODY STYLES CONTAINED

IN THIS ARTICLE MAY DIFFER SLIGHTLY FROM YOUR APPLICATION. "

C-6 ROUND HOLE STAINLESS STEEL GRILLE KIT GEN 2.3 INSTALLATION INSTRUCTIONS

Thank-you for the purchase of our new C6 GRILLE KIT product. When installed correctly this product will keep your radiator and condenser protected for the life of your car. The Best part is that it looks great!

The new Gen 2.3 SS C6 Grille kit is designed to be installed in front of the original plastic. Please follow the installation and care instructions exactly to insure you get the maximum usage and benefits from the C6 GRILL KIT Product.

TOOLS AND ADDITIONAL ITEMS REQUIRED

- 1) Socket set and wrenches
- 2) Screwdriver
- 3) Lock tight or equivalent

INSTALLATION TIME - 20 minutes

Before you begin, insure that you have the right kit for your car.


STEP # 1: Preparation

The plastic GM grille does **NOT** need to be removed

You may wish to further polish the stainless steel to a mirror shine using metal polishing products.

Raise the front of the car and securely support it with jack stands.

Remove the 4 lower screws holding the GM plastic grille to the bumper. brake duct panel (#3 Fig 1 in diagram) The center screw does not need to be removed

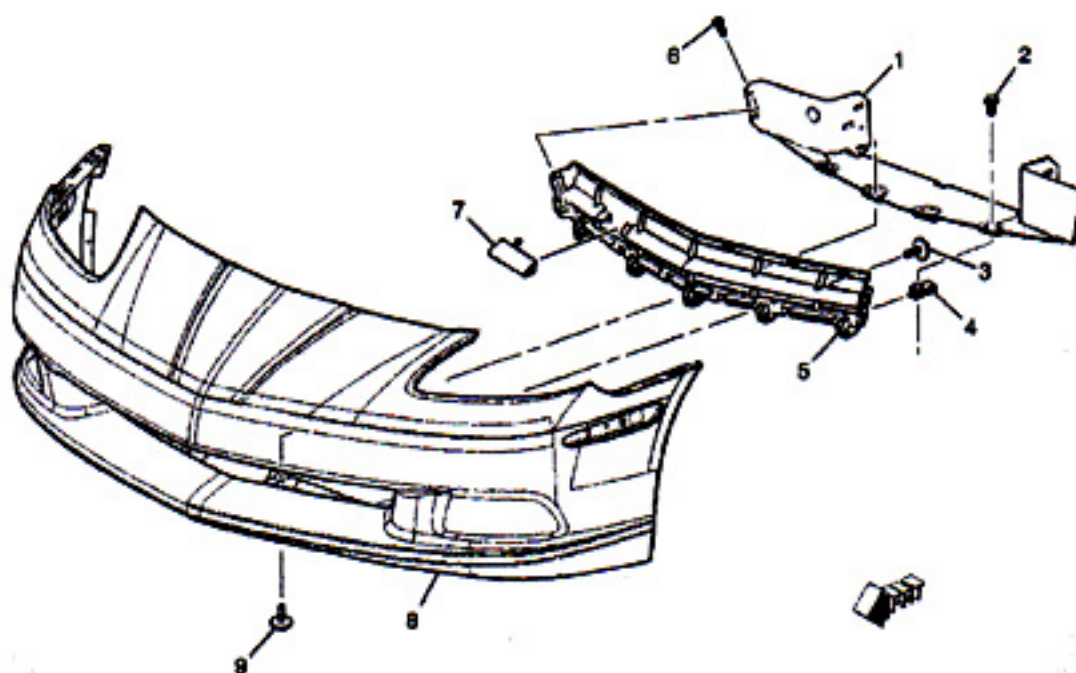


Fig#1

Step # 2 : Mounting the SS Grille

Insert the 4 supplied brackets (2 on the left and 2 on the right) and reinsert the 4 screws. You may wish to coat the screws with lock tight or equivalent

Tighten the brackets from the lower air intake section, under the car. Snug up the screws so that brackets can move from side to side of final positioning.

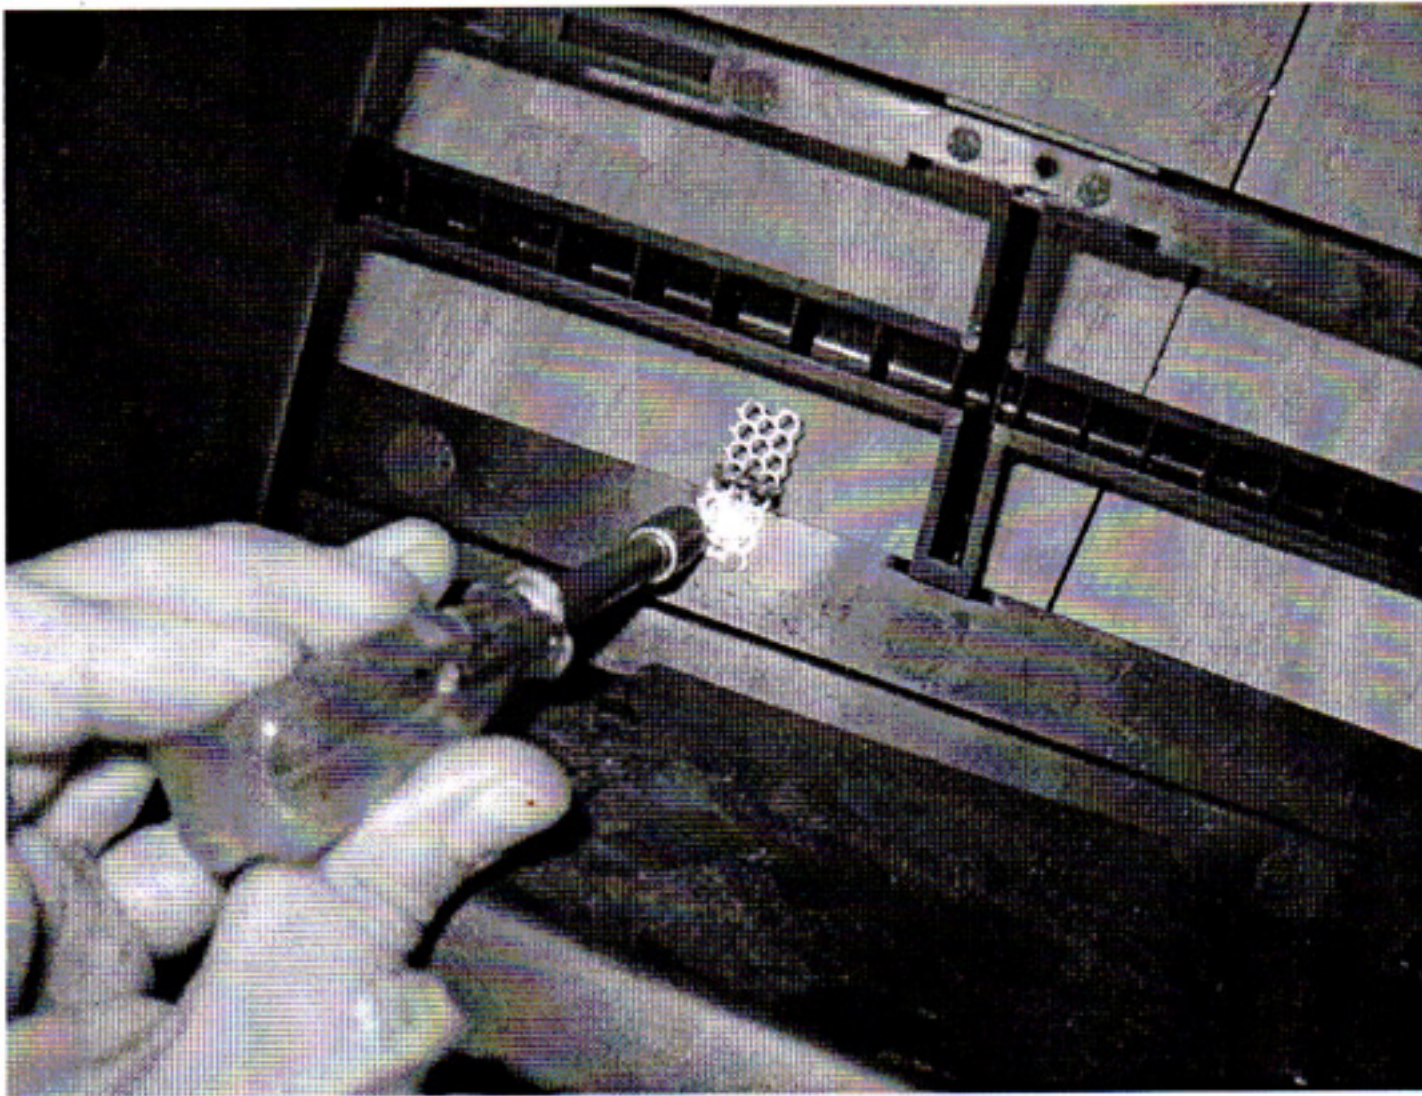

Place the Gen 2.3 Grille in position (Fig #2) and insure that it is centered. Note the Gen 2.3 Grille is designed to fit 90 % vertically and not on the same angle as the original plastic GM grille.



Fig#2

Then you have properly positioned the grille, install the mounting screws through the front of the grille, to the brackets and secure them with the nut from the inside. (you will need to do this through the lower air intake opening) We suggest that you use lock tight or equivalent on the bolts.


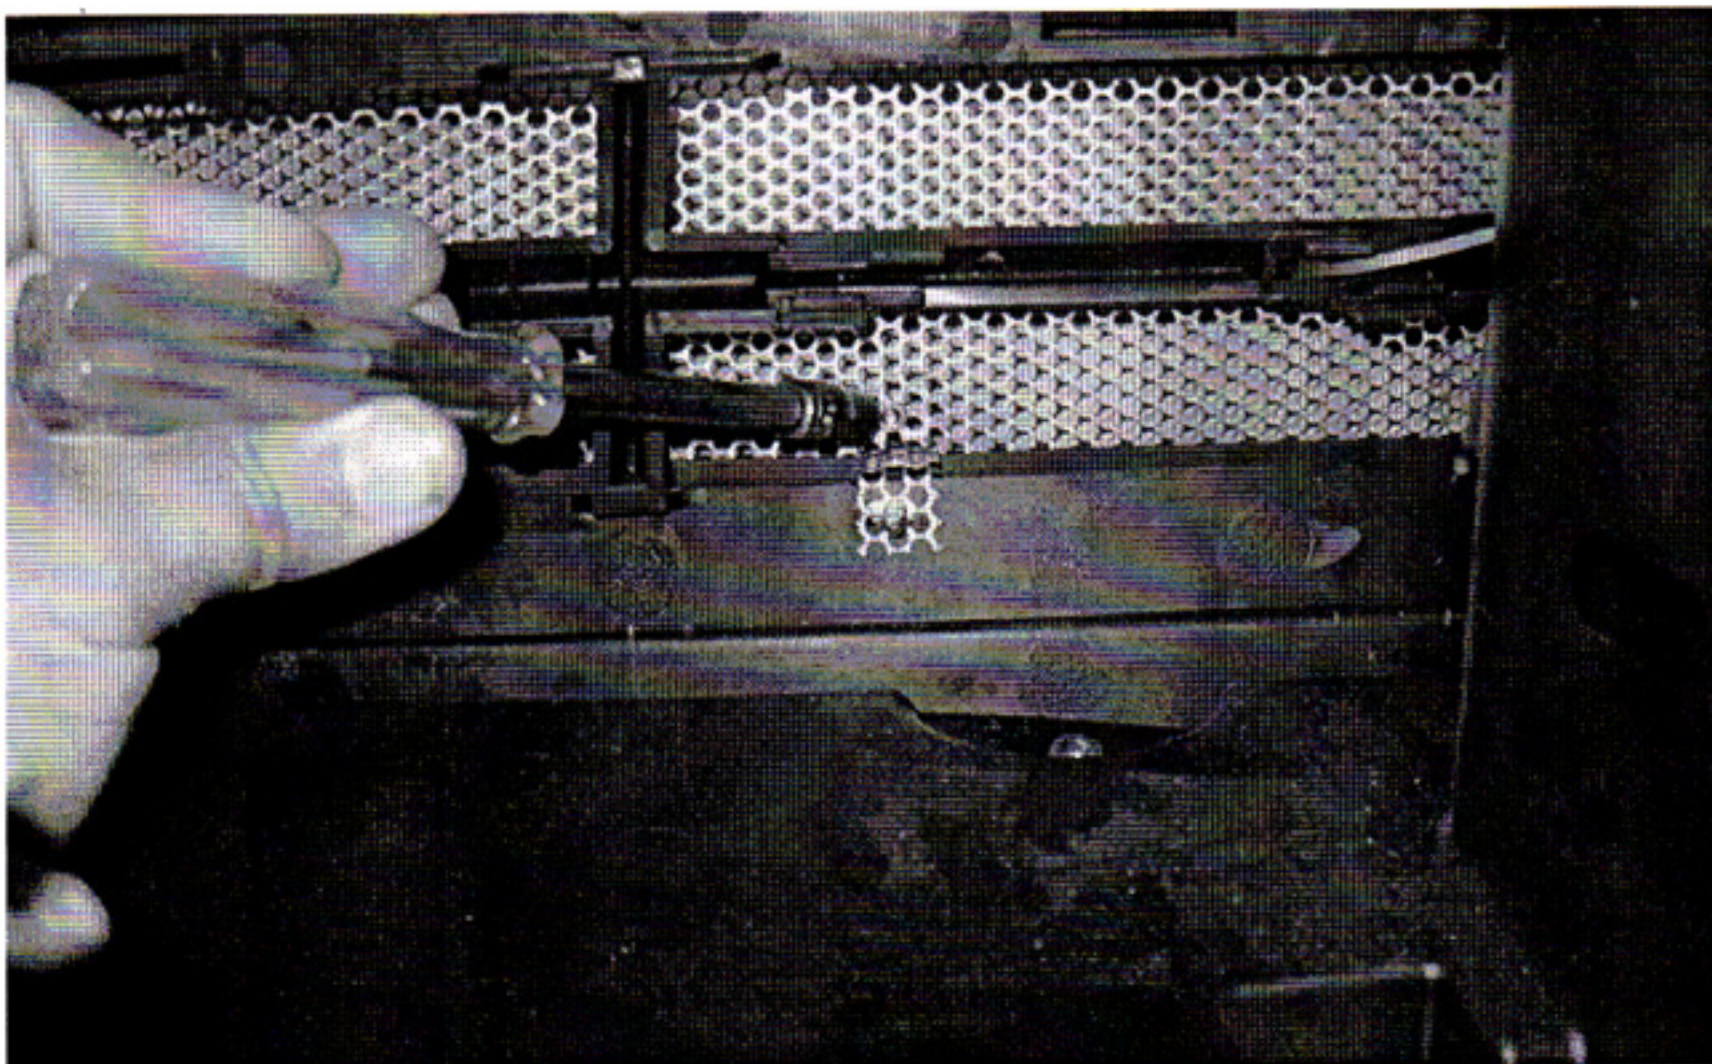


Fig # 3

Note : The tightening of the two outer bracket nuts may be difficult. As an alternative, you may wish to note the position of where the two outer brackets will install to the grille (previous step) and pre install them to the grille. When you position the grille, you must take extra care not to scratch the paint. You must insert the grille into the area opening on a angle (brackets first) and then into its 90 degree position.

With the grille now in position, fully tighten the lower 4 screws.

Place the two upper brackets in place, through the lower air intake opening. Insure that they are flush with the upper section of the grille and apply the adhesive strip and secure the the upper opening. (Fig #4) Insert the bolt through the grille and bracket and tighten nut. (Note: insure that the section where the adhesive is place is thoroughly free of dirt.)

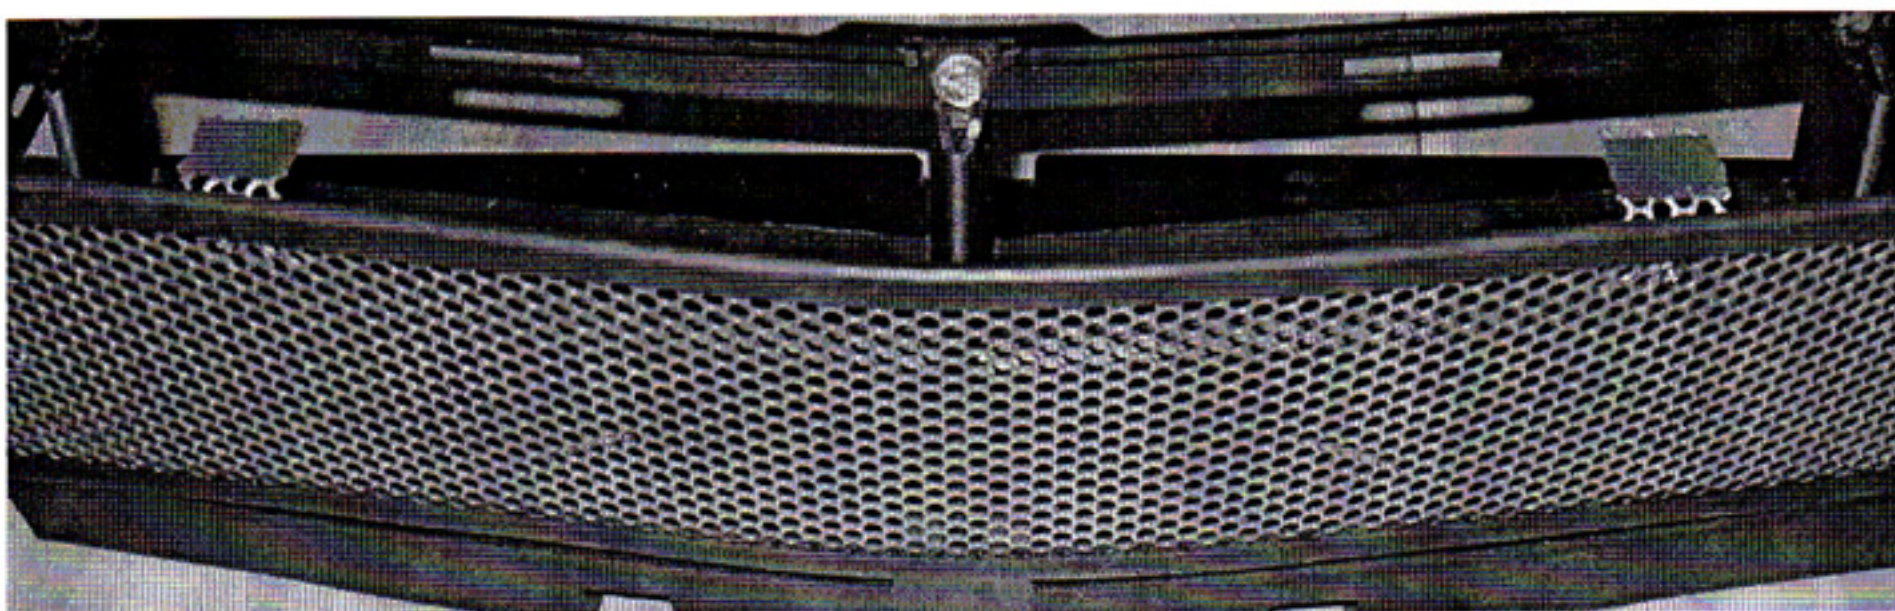

FINISHED

CARE OF THE C6 ROUND HOLE STAINLESS STEEL GRILLE KIT PRODUCT

The product is designed to last the entire life of your car under normal conditions. The product will resist heat, cold, rain, wind, and impacts. Although this product is durable, it will not survive a major curb impact or a front-end collision.

Your C6 GRILLE KIT is high quality stainless steel and can be cleaned normal car wash soap. You may also a stainless steel polish and a buffer to increase the shine factor.

If you have any questions or concerns, please contact us or e-mail us. Please view the Eckler's website , tips or new products
www.ecklers.com