



**COLGAN
CUSTOM**

"The Original Car Bra"

SINCE 1961

**INSTALLATION
INSTRUCTIONS**

PR1343 Chevrolet Corvette

Contents:

- 1) Nose mask

Required Tools

- ABS shim (provided)

Note: All materials needed are contained in box. Please inspect package for missing or damaged parts

Congratulations on your purchase of a Colgan bra, the finest automotive car bra available. Colgan Custom Mfg. is the original bra manufacturer who introduced the custom fitted bra to the public in 1961. We have designed and are producing over 2,000 different car, truck, van, and sport utility bra and mirror cover patterns, each matched to a specific vehicle's make, model, and year

PREPARATION:



- Initial fit is important. Accurately align, new vinyl will set into a "memory fit".
- Install on clean, dry surfaces.

NOTICE:



- Do not install over new paint. Consult your body shop for paint curing information.
- Do not install over new wax. Waxes/sealants contain some moisture and should be allowed to dry.
- Car bra installation is easier when the sections are warm. Place the bra sections in the sun (or in a warm room) for thirty (30) to sixty (60) minutes before installation

INSTALLATION PROCEDURES


1. If the vehicle has a front license plate, slide the car bra onto the license plate bracket like a button through a button hole.

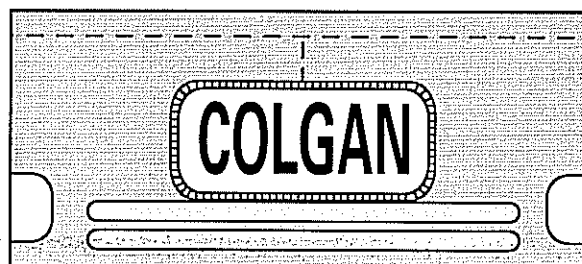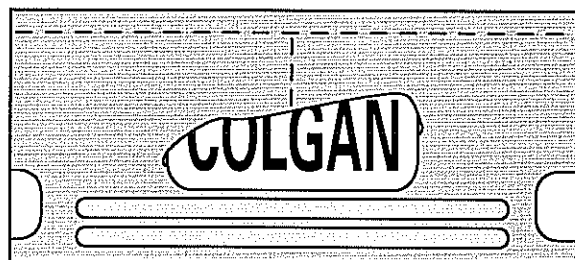


2. Attach the two (2) plastic clips on the insides of the engine compartment.
(See Photo)

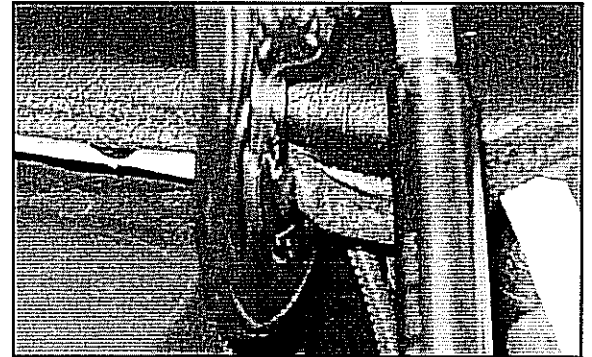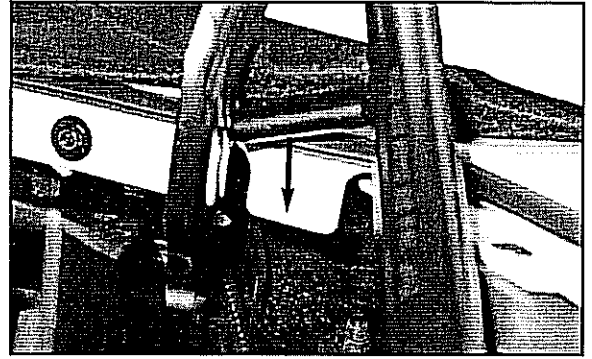

3. Attach the two (2) felt tabs first on both fenders using the A.B.S. shim provided.
(See Photo)

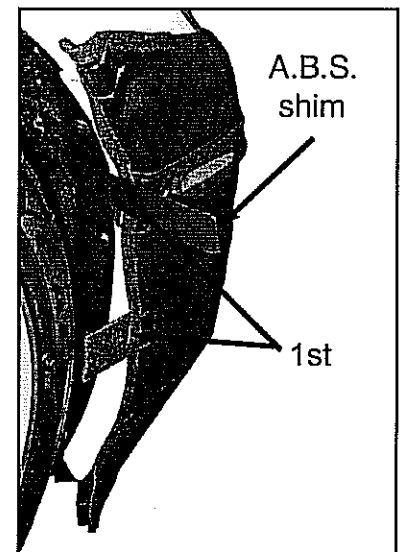


4. Attach the plastic clip to the lower inside corner of the wheel well. Repeat on both wheel wells.
(See Photo)

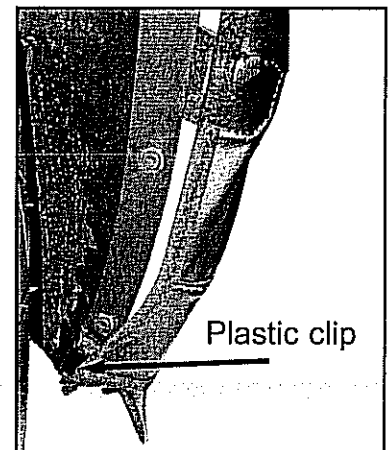

5. Attach the top felt tabs at the top of the fender joints to hold the nose mask in proper position.


(See Photo)

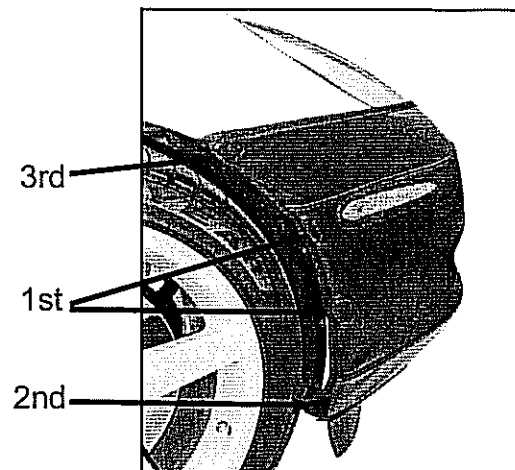

6. Attach the upper two (2) elastic straps with


"S" hooks on the vertical plastic in the air intake area, under the license plate.

(See Photo)

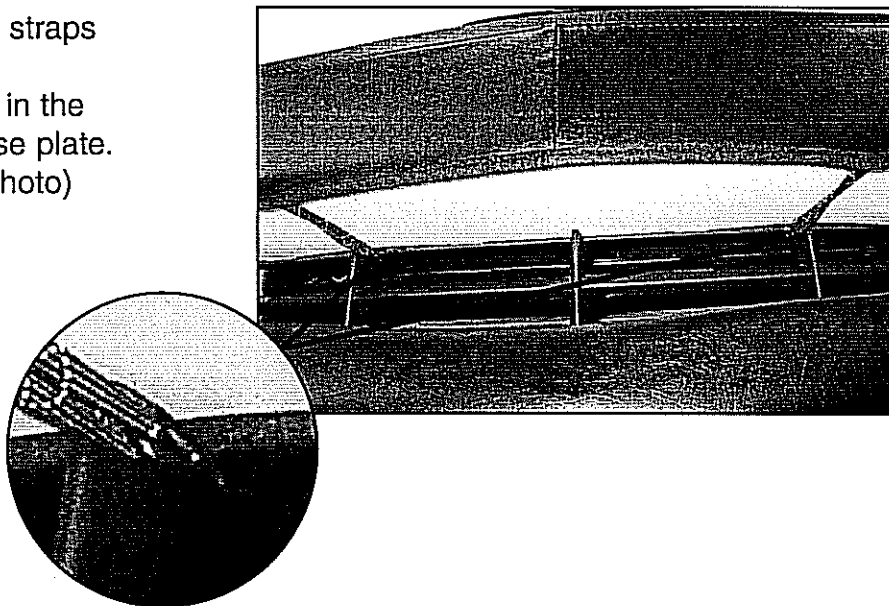


7. Attach the three (3) lower elastic straps with "S" hooks onto the vertical plastic in the lower air intake area, under the license plate.

(See Photo)

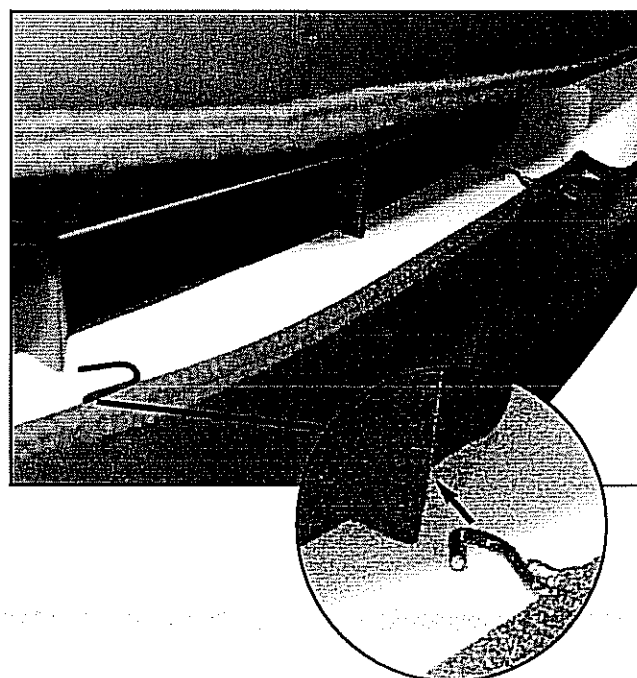


8. Attach the two (2) plastic clips on the side of the air intake.

(See Photo)

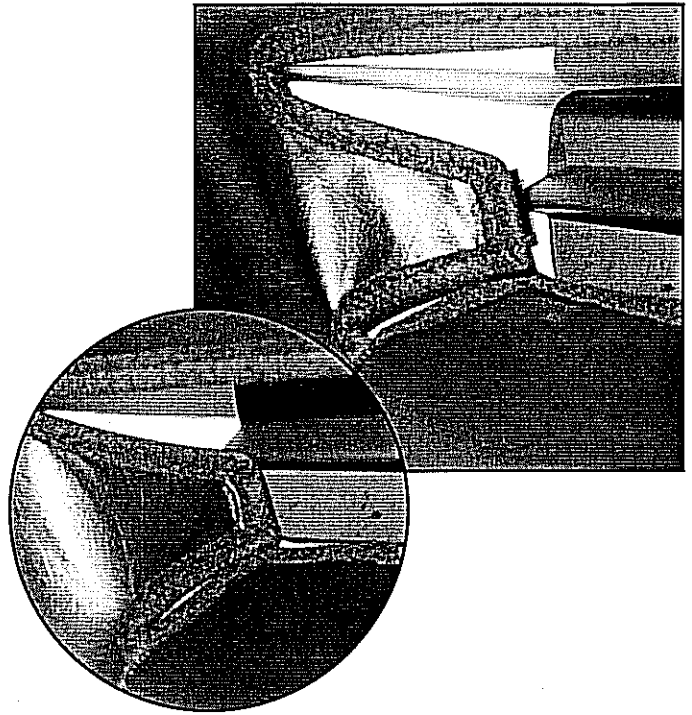


9. Attach the two (2) ribbon straps with "T" Hooks onto bumper support openings and attach the center elastic strap with "T" hook between the bumper and liner.

(See Photo)

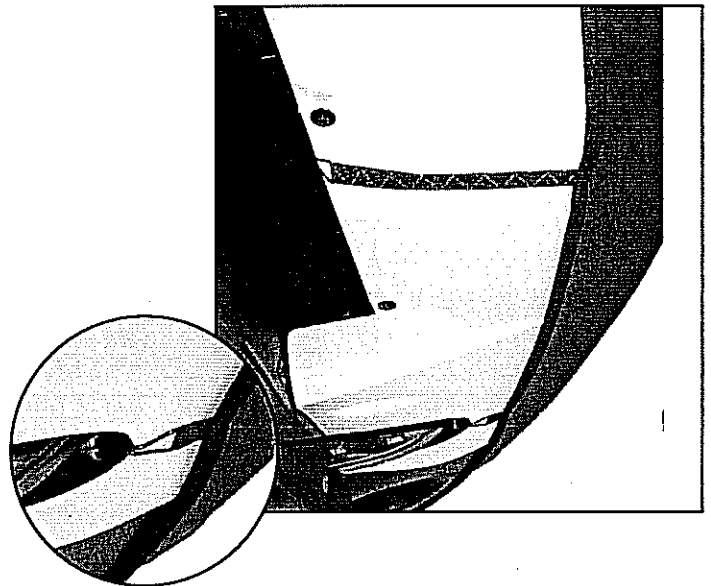


10. Use the ABS Shim provided to slide the stiffener between the headlight and fender. Begin one corner first. Use the plastic shim to slide the stiffener all the way inside.


(See Photo)

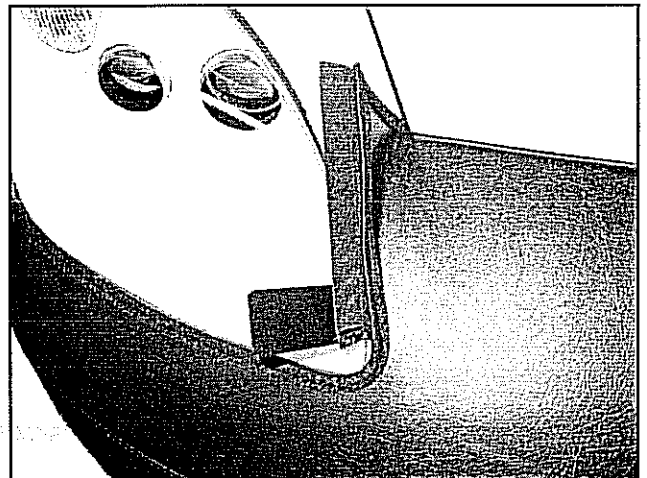

Complete installed bra:

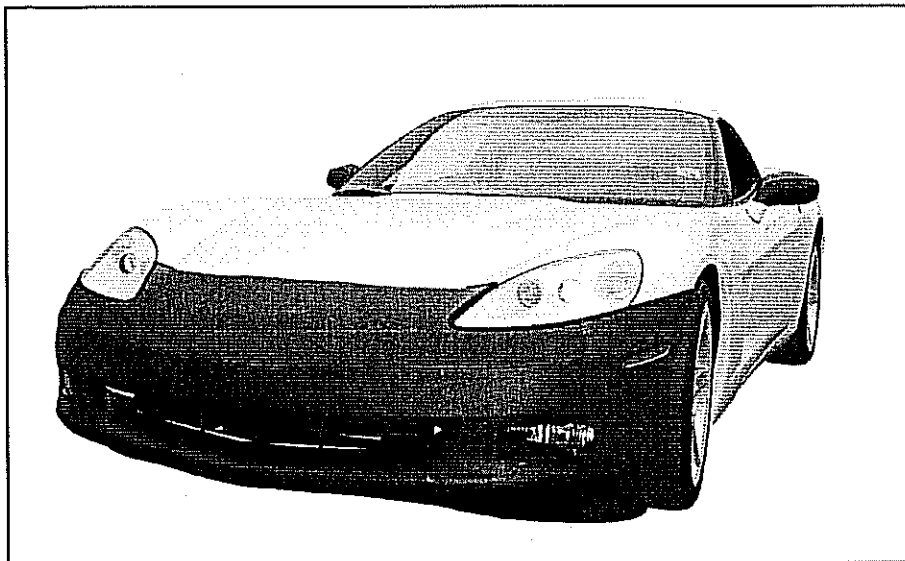

Also Available:

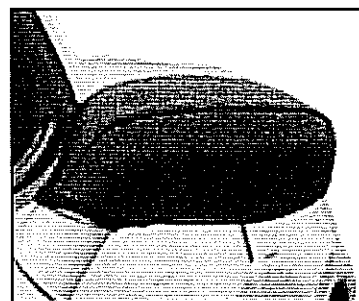

Part # MC 924

REMOVAL OF THE CAR BRA

- Reverse the order in which the car bra was attached. The last item connected should be the first item disconnected
- When disconnecting the felt covered well tabs stretch the vinyl and the tabs toward the rear of the vehicle to relieve the tension then remove.

Note: Do not un-bend or rebend any of the tabs when removing or reinstalling the car bra

CAR BRA MAINTENANCE

- **Remove your car bra every time you wash your vehicle. Reinstall only when vehicle is dry**
- Periodically inspect the underside of your car bra and shake to remove any accumulated road grit, insects, or other debris that might damage your paint.
- Clean your car bra with any water soluble detergent and warm water.
- **Your car bra may be used in all weather conditions. If the backing gets wet, remove the car bra as soon as possible and allow to dry completely before reinstalling.**
- Your car bra has a topcoat of ultraviolet impervious material that protects it against drying and cracking. Do not use silicone or petroleum based vinyl protectants / dressings, since these will damage this topcoat.
- **Always** adjust or remove a **Flapping, Fluttering, or Ballooning** car bra **immediately!** Check to see that the air deflectors are in place and that all attachments, hooks, mounting tabs, etc. are securely attached and in its proper location. **NEVER** put your car bra into the washer or dryer.

If you have any questions regarding the car bras performance or these instructions, please remove it immediately and call **Technical Support** at (800) 477-2727 between 8:00 am and 4:30 pm (Pacific time) Monday Through Friday.



"The Original Car Bra"

SINCE 1961