

Chevrolet Corvette Door Sill Plate Package

Contents

Description	Quantity
Plate, Door Sill Left Hand	1
Plate, Door Sill Right Hand	1
Instruction Sheet	1
Alcohol Prep Pads	2

Verify all parts are present

Preparation - Before Installation

1. After opening the kit, check to see if any parts are missing and that the product is not damaged.
2. This product should be installed with proper installation tools.
3. Install this product while observing all warnings and precautions stated in this instruction booklet.
4. **VERY IMPORTANT:** Begin with a thoroughly washed vehicle.
5. Ambient temperature of sill plates and vehicle must be 70°F to 80°F at the time of installation and for two hours after.
6. Do not high pressure wash for twenty-four hours.

Installation Instructions

1. Remove existing production sill plate.
2. Remove residual adhesive using VMP naphtha.
3. Wipe area where sill plate is to be applied using supplied alcohol prep pad.
4. Apply masking tape to align sill plate with end of Molding Assembly-body side front (Figure 2).
5. Tape sill plate into position as shown (Figure 3).
6. Use tape as "hinge" to flip sill plate up, remove liner.
7. Carefully flip sill plate down. Press firmly in center with soft cloth, squeegeeing from the center outward.
8. Remove tape.
9. Repeat steps 1 through 8 for opposite side of vehicle.

FIGURE 1

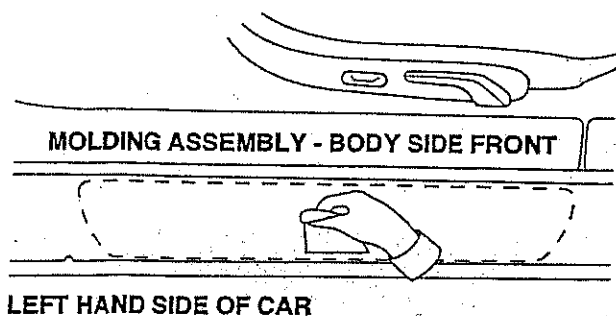


FIGURE 2

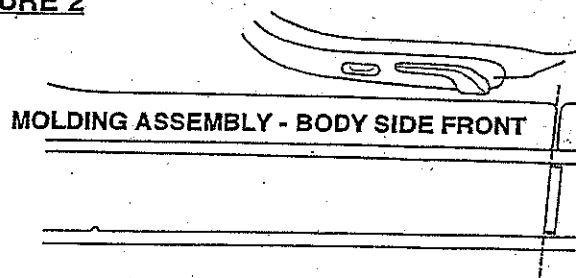


FIGURE 3

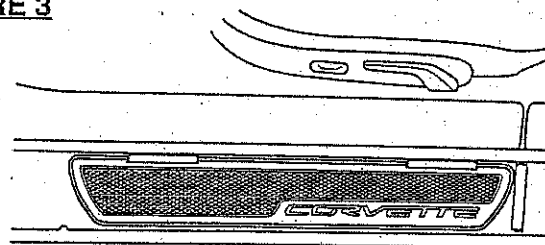


FIGURE 4

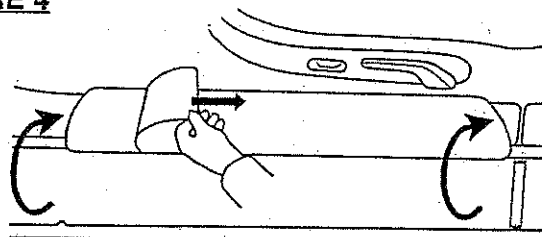


FIGURE 5


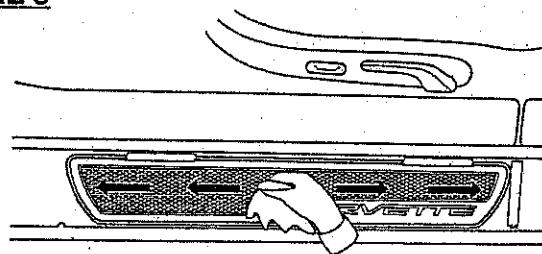


FIGURE 6

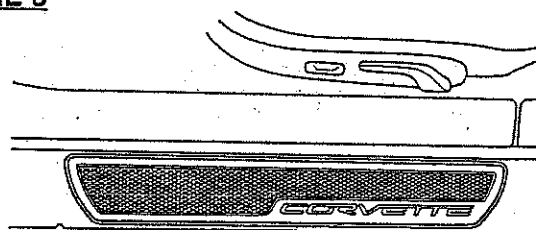

Chevrolet Corvette Door Sill Plate Package

PART NO. **88966011** SHEET **1** OF **3**

ALL INFORMATION WITHIN ABOVE BORDER TO BE PRINTED EXACTLY AS SHOWN ON 8.5 x 11 WHITE 16 POUND NON-BOND RECYCLABLE PAPER. PRINT ON BOTH SIDES, EXCLUDING TEMPLATES. TO BE UNITIZED IN ACCORDANCE WITH GMSA SPECIFICATIONS.

DATE	REVISION	AUTH	DR
24MY04	Initial Release-Brad Hranach		
10JND4	Revised-Brad Hranach		

TITLE
INSTALLATION INSTRUCTIONS
Chevrolet Corvette Door Sill Plate Package
PART NO. 88966011 SHEET 1 OF 3