

The wiring diagram is for the supplied socket.



To make the inside taillamps function as the outside lamps do; wire the supplied socket into the existing and corresponding taillamp harness as shown. Scotch locks are supplied for splicing purposes.




BLACK - Ground
BROWN - Running Lights
GREEN - Stop & Directional Signals

Note: Colors on Original wiring harnesses may vary. Using a testing tool to check each wire function.

1975-82 TAILLAMP CONVERSION KIT

WIRING DIAGRAM FOR A6874

The wiring diagram is for the supplied socket.

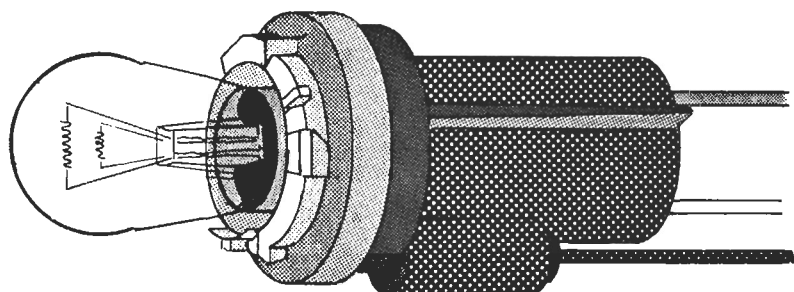


BROWN - Stop & Directional Signals

YELLOW - Running Lights

BLACK - Ground

NOTE: This installation will eliminate the use of backing lights on your Corvette.

To make the inside taillamps function as the outside lamps do; wire the supplied socket into the existing and corresponding taillamp harness as shown. Scotch locks are supplied for splicing purposes.

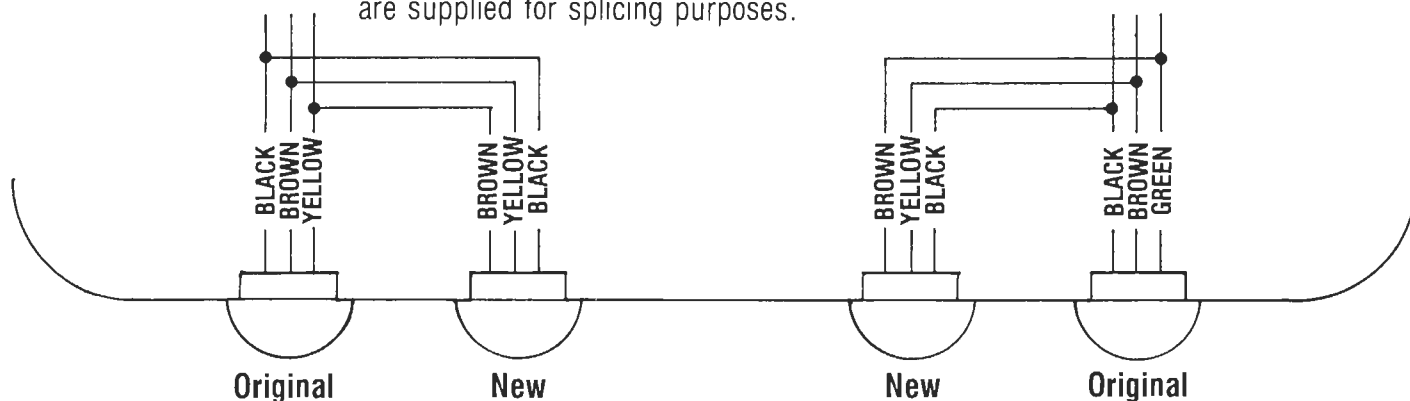

Original

New

New

Original

Stock Lefthand
Taillamp Color Code

BLACK - Ground
BROWN - Running Lights
YELLOW - Stop & Directional Signals

Stock Righthand
Taillamp Color Code

BLACK - Ground
BROWN - Running Lights
GREEN - Stop & Directional Signals

Note: Colors on Original wiring harnesses may vary. Using a testing tool to check each wire function.