



C3 Corvette Speaker Kits

Thank you for purchasing our speaker kit.

These unique superior sound speaker kits are designed to take advantage of a C3 Corvette's natural acoustical configuration without compromising compartment space. Installation of the kit will not interfere with the illumination from your rear interior light nor the storage of your T-tops. The kit is available in two possible configurations; either with or without Rockford Fosgate speakers. If you ordered the speaker kit with speakers, it is equipped with premium speakers or you may choose to purchase your own speakers for installation with the kit. The speaker boxes are made of MDF speaker acoustical material which have been predrilled with screw holes for easy speaker installation and removal.



Speaker Kit Contents:

- Premium MDF carpeted speaker boxes
- Speaker box attachment hardware ("L" Brackets")

Speaker Equipped Kits:

- One pair of Rockford Fosgate Prime speakers (4 ohm 2-Way, 65 Watts RMS, 130 Watts Max)
- Speaker wires
- Speaker Instructions


Instructions

Position each speaker into the left and right corners of the rear storage compartment area as indicated in picture. When eventually attached to the rear panel, speakers will be at a cross angle to the seats for best sound positioning. Before attaching speaker boxes in place, attach the "L" brackets to the inside of the boxes with screws provided.

Run wiring from your stereo system to the speakers paying attention to left and right wiring and positive and negative speaker terminals. Remember to leave enough slack in the wiring to later tuck away out of sight.



Remove the passenger side dash panel to access radio wiring. Wires should run behind the passenger side kick panel, then under the door sill to the rear compartment area where they will be attached to the speakers.

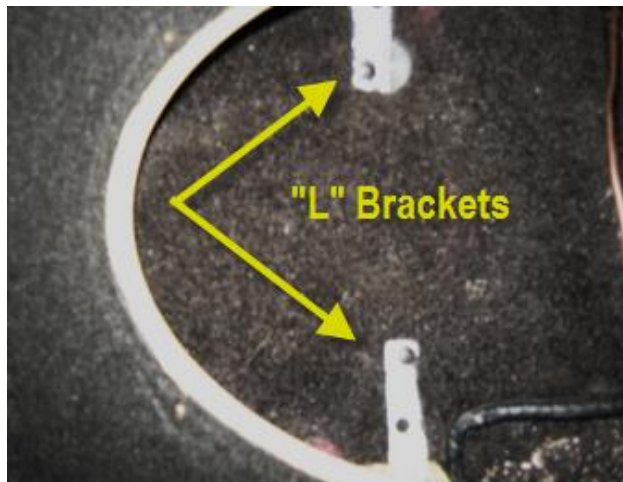

Next, attach speaker wiring to each speaker and temporarily remove the four screws that hold the speaker covers and speakers in place in order to fasten boxes to the storage compartment back panel. Identify where the attachment screws will go in the compartment panel and drill a small pilot holes into the back panel to accommodate attachment screws for final installation of the box (one screw per "L" bracket). Reinstall speakers and covers to boxes. For questions about installation, please contact us at 208-697-1677.

U.S. Patent Pending

Eckler's Corvette

5200 S. Washington Ave., Titusville, FL 32780

Toll Free Order Line: **1-800-284-3906**